

INSTALLATION GUIDE

E700M & E800A



Workstations





Technical Assistance call (800) 655-5649

TABLE OF CONTENTS

Section 1	<u>PAGE</u>
Tools Required	3 3 3
Section 2 How to install a NEXT™ 70 or 80 Workstation	4
Connecting the Filter/Regulator	5 6 6
Final Section	
General Arrangement	7 8

SECTION 1

TOOLS REQUIRED

Phillips Screw Driver for all Screws on the unit Flat Screw Driver or Snips for removal of Staples Teflon Tape

Adjustable Wrench

PARTS REQUIRED

- Hose and Fittings for connection to Regulator
- Compressed Air Line next to unit

UNPACKAGING THE UNITS

Step 1: Carefully inspect the shipping carton for any signs of transport damage.

<u>Step 2</u>: Begin by removing the staples attaching the box to the skid (A Flat Screw Driver or Snips will do the job).

Carefully remove your Spray Gun Washer from the shipping carton.

Remove the four screws from the bottom of the Spray Gun Cleaner connected to the palette

Remove the unit from the palette and place it in the general area for installation.

You are ready to begin with the installation of the Spray Gun Cleaner.

Warning! Do not use electrical or spark producing equipment in existing Paint Mix Rooms until all potential Hazards and (vapors, material spills etc) have been removed





Note: Workstation shown w/ optional Cover Door

SECTION 2

POWER CLEAN™ WORKSTATIONS

<u>Step 1</u>: Locate the container of parts (In Cabinet Storage Area) and inspect the inventory list to make sure all the parts are included.

If any parts are missing, contact the BECCA. Included is a Filter/Regulator. Also included is a Solvent Wash bottle.



<u>Step 3</u>: Slide the Spray Gun Cleaner into its final position.



CONNECTING THE FILTER/REGULATOR

<u>Step 4</u>: When facing the Spray Gun Cleaner look on the left side of the cabinet. Here you will find the Air Inlet. This is where you install the Regulator/Water Separator and hook up the shop air. Follow the instructions included in the Parts Kit.

Note: This regulator should be set up to 110psi. We have a second regulator inside the Control Box to protect the pumps (Factory set at 85-90psi)



<u>HOW TO INSTALL A GROUND WIRE – For</u> OPTIONAL HEAT PKG SYSTEMS ONLY

Step 7: Locate the ground wire on the rear of the unit and cut the tie-rap.

<u>Note</u>: The Spray Gun Cleaner must be grounded to your grounding system.




FINAL CONNECTION

<u>Step 8</u>: You are now ready to make the final connection of the compressed air to the Filter/Regulator.

The Gun Washer is ready for **START-UP!**

Please follow the BECCA "Start-up Guide"

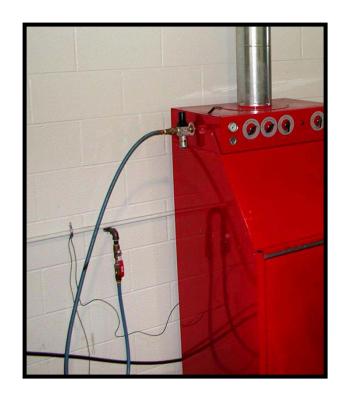

WARRANTY INFORMATION / TECHNICAL ASSISTANCE

The Warranty of your system begins with the Certified Start-up. Make sure this is completed and you receive a copy of the Certified Start-up document.

For more information, prices or technical assistance, contact your local BECCA distributor or call / fax our BECCA Care™ Numbers:



2010 Cobb International Blvd Ste H Kennesaw, GA 30152

Tel: (800) 655-5649 Fax: (800) 655-5684

Copyright © 2008 by BECCA Inc. All Rights Reserved.