

S100M

Manual Solvent Spray Gun Cleaner



Check out our
Brief
Training Videos at
www.beccainc.com



BECCA®



- **POWERCLEAN** •
PROTECTS AIR PASSAGEWAYS
- **OVERSIZED STAINLESS WORK BASIN** •
SPACIOUS WORK AREA
- **PULSATING FLUID POWER CLEANING** •
FLUSHES AWAY CONTAMINATION

S100M

Manual Solvent Spray Gun Cleaner

The New BECCA S100M Manual Spray Gun Cleaner is designed to meet the challenges of getting solvent spray guns clean quickly....

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion

STANDARD UNIT FEATURES:

- STAINLESS STEEL BASIN w/ COVER - Oversized work Area
- POWERPISTOL™ - Quick & Powerful Spray Gun Cleaning
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- SPLASH PAD - In Basin to Reduce Splash - Self Cleaning
- FLOW BRUSH/SPIGOT - Combined to Serve both Functions
- FOOT PEDAL - Hands-Free Fluid/Pump Control
- HIGH FLOW QD'S - High Flow Corrosion Resistant
- RED POWDER COATED FINISH - Long Maintenance Life
- INPUT AIR FILTER/REGULATOR - Proper System Air Control
- NESHAP COMPLIANT - Meets NESHAP Requirements



Product Specifications:

Dimensions:

Overall:

44"H x 26"W x 23"L

1118 mm x 660mm x 584 mm

Working: (Stainless Basin)

9"D x 21"W x 19"L

228 mm x 533mm x 483 mm

Weight: 110 lbs (50 kg)

Shipping: Via Freight

OPTIONAL UPGRADES:


- SOLVENTWASH™ CARTRIDGE FILTRATION w/ 75 Micron Filter
- FLUID RESERVOIR - 5 Gallon Steel Cans to hold Clean and Used Fluid
- SPLASH CONE - Enclosure to contain Spray Gun Flush Splash



POWERPISTOL™ - Pulsating Fluid...
Powerful Cleaning for the Fluid Passageways



OVERSIZED STAINLESS STEEL BASIN A Spacious Work Area for Easy Use

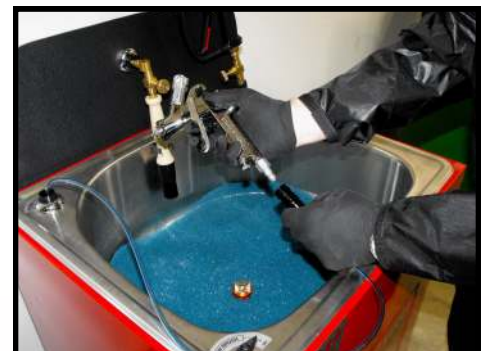

POWERCLEAN™ Supply's Compressed Air to the Spray Gun During the Cleaning Process, Protecting the Air Passageways



BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com