


Turbo™

Pressure Pot & Fluid Line Cleaner System

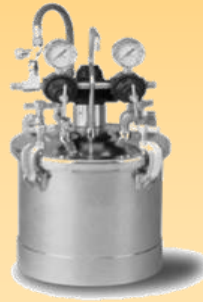

*The
Professionals
Choice*

Spray Gun Cleaner Option

BECCA Turbo™

Benefits

- **TURBO™ process for Cleaner Pressure Pot & Fluid Lines**
- **Faster Cleaning** — Reduces Labor time
- **Save Solvent usage** with BECCA's Pre-Clean and Final Rinse system
- **Easy Connection to Pressure Pot**
Fluid Connections NOT supplied by BECCA
- **Two Methods of Cleaning:**
 - ◊ Detailed—Closed Loop
 - ◊ Quick—Connect & Shoot
- **2 Year Warranty—Longest in the Industry**
- **BECCA Care™** - Local sales, installation, training and service




BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

**Models S100M, S10A, S20A,
S300A, S700M & S800A**

The Pressure Pot Cleaner System was designed to handle the cleaning of the pressurized pot & fluid lines typically found in large or high production operations.

TURBO is a unique system that provides a Pre-Clean & Rinse capability through the fluid line while turbulent compressed air is added providing the Turbo cleaning effect. The compressed air then can dry the lines.

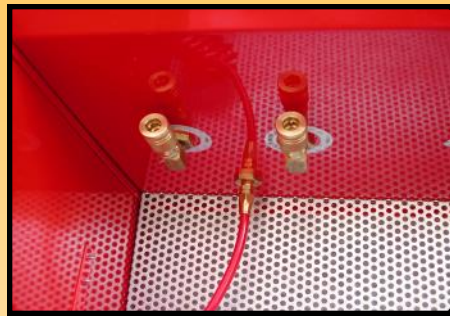

S800A

Pressure Pot & Fluid Lines can be easily connected to the Turbo System utilizing your operations standard Fluid Quick Disconnects (not supplied)



BECCA®

It's all about improving your productivity, finishing quality, & saving money.

In today's environment, operations know the meaning of efficiency, reduced cycle time and variable cost reduction. BECCA continues to redefine what a Solvent Recycler supplier should do for its customers:

- Help Customers Succeed**
- Deliver Quality Products**
- Bring the Latest in Technology**
- Provide the Best Service**

S300A



Two Methods of Cleaning:

- Quick Clean—Spraying out through the spray gun (below)
- Detail Clean—Using Closed Loop system (right)



BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com