



- **SOLVENT Spray Gun Cleaners**
- **SOLVENTWASH™ Filtration Recyclers**
- **COMBO Systems (Spray Gun Cleaner & Distillation Recycler)**
- **Consumables**



“Innovation for Waste Minimization”



BECCA

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

Professionals that Approved & Use



Industrial



Automotive



Automotive Refinish



Paint Company



Defense



Military



And many more!

The Professionals Choice, Quality, Technology, Support

Phone 1-800-655-5649 Fax 1-800-655-5684 www.beccainc.com

"Innovation for Waste Minimization"

"Solvent Squirt"

Solvent Pre-Rinse & Spray Gun Cleaner

Check out our
Brief
Training Videos at
www.beccainc.com



- **USE w/ ALL SOLVENTS •**
ACETONE, LACQUER THINNER, MEK, ETC.
- **SHIELDED NOZZLE •**
FAST & EFFECTIVE
- **PORTABLE •**
USE ANYWHERE
- **NESHAP COMPLIANT •**
MEETS 6H REQUIREMENTS



BECCA®



"Solvent Squirt"

Solvent Pre-Rinse & Spray Gun Cleaner

***"Solvent Squirt"™* SSS-10000 SOLVENT PRE-RINSE & SPRAY GUN CLEANER:**

- SOLVENT COMPATIBLE - Compatible with Nearly All Solvents
- NESHAP COMPLIANT - Meets 6H National Requirements (No Atomization) Other Spray Bottles in use do not meet NESHAP Requirements.
- DEFLECTOR SHIELD - Concentrates Cleaning & Protects from Splash Back
- SQUEEZE BOTTLE - Creates Needed Cleaning Pressure
- RECYCLABLE MATERIALS - Material of Construction are all Recyclable
- PRODUCT SPECS - Container Vol:17oz. (500ml) Pkg Weight: 1.0lbs, Shipping: Via FedEx



"Solvent Squirt"™
SSS-10000

Pre-Rinse System PSS-40000

For Pre-Rinse of the Spray Gun prior to Cleaning Process.
Includes:

- (1) Pre-Rinse Bottle w/ Deflector Shield
- (1) 5 Gallon Pail Liners
- (1) 5 Gallon Container
- (1) Funnel w/ Lid



RECOMMENDED CLEANING SYSTEM PACKAGES:

***"Clean to Waste"* - Drum System SSS-65000:**

"Solvent Squirt"™, Cleaning Station, Air Kit, Drum Funnel (Requires Waste Drum—Not Available from BECCA)



Drum Funnel

"Clean to Waste" Drum System

Common Items



"SolventSquirt"™



Cleaning Station



Air Kit

***"Clean to Waste"* - Can System SSS-50000:**

"Solvent Squirt"™, Cleaning Station, Air Kit, Can Funnel (Requires Waste Can — Part# 823200 Available Option from BECCA)



Can Funnel

"Clean to Waste" Can System



"Solvent Squirt"

Options & Accessories


CLEANING STATION



Part# SSS - 12000

- FLEXIBLE DESIGN
Place On a Drum or Table Top or Cart
- FEATURES INCLUDE:
 - Basin w/ 3.1 Gal Capacity
 - Splash Pad
 - Cleaning Brush
 - Tray for Cleaning Tools

AIR KIT

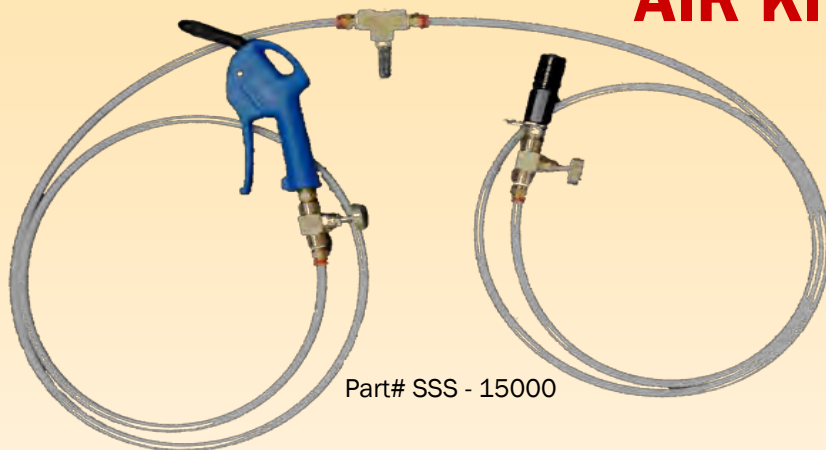

Part# SSS - 15000

- POWERCLEAN
 - Compressed Air to Protect Air Passageways & Improve Cleaning
 - High Flow Quick Disconnect
 - Adjustable Flow Control
- BLOW OFF GUN
 - OSHA Compliant
 - Adjustable Air Flow Control

FUNNEL KITS



Part# SSS - 12500

DRUM FUNNEL w/ EXTENSION (Solvent Only)

This Funnel is designed to be screwed to a 55 Gallon Drum for Solvent Waste

Part# SSS - 12555

DRUM FUNNEL (Solvent Only)

This Funnel System is designed to be Screwed to a 55 Gallon Drum for Solvent Waste.



Part# SSS - 14000

5 GAL CAN FUNNEL (Solvent Only)

This Funnel System is designed to fit a 5 Gallon Container w/ Spout.



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com



BECCA Tools - Salesman's Quick Reference



Little Squirt H2O Units



Part Number	Product Description	List Price	
LSW-10000	Little Squirt Waterborne Spray Gun Cleaner Single Unit	\$98.00	*
LSW-10000 - 6	Little Squirt Waterborne Spray Gun Cleaner Case (6 Units)	\$591.00	*

H2O Pre-Rinse



Part Number	Product Description	List Price	
PSW-10000	Waterborne Pre-Rinse Bottle - Single Unit	\$26.00	
PSW-10000 - 6	Waterborne Pre-Rinse Bottle - Case (Qty 6)	\$149.00	

Little Squirt H2O Options



Part Number	Product Description	List Price	
LSW-12000	Little Squirt Cleaning Station	\$117.00	*
LSW-15000	Little Squirt Air Kit	\$130.00	*
LSW-12500	Little Squirt Drum Funnel w/ Extension Kit	\$84.00	*
LSW-20000	Little Squirt Kettle Heat (51 oz) System	\$130.00	*
LSW-30000	Little Squirt Standard Heat Tank (5 Gal) System w/ Pump	\$851.00	*
LSW-18500	Little Squirt Clarifier Recycling System	\$130.00	*
CD-50	H2O Dry System (Container, 6 Pk H2O Dry, 3 Liners, & 3 Stir Sticks)	\$103.00	*
836500K	H2O Dry Funnel Kit	\$84.00	*

Solvent Squirt Solvent Units



Part Number	Product Description	List Price	
SSS-10000	Solvent Squirt Solvent Spray Gun Cleaner Single Unit	\$26.00	*
SSS-10000 - 6	Solvent Squirt Solvent Spray Gun Cleaner Case (6 Units)	\$149.00	*

Solvent Squirt Solvent Options



Part Number	Product Description	List Price	
SSS-12000	Solvent Squirt Cleaning Station	\$117.00	*
SSS-15000	Solvent Squirt Air Kit	\$130.00	*
SSS-12500	Solvent Squirt Drum Funnel w/ Extension Kit	\$103.00	*
SSS-12555	Drum Funnel Kit	\$71.00	*
SSS-14000	5 Gallon Can Funnel Kit	\$77.00	*

*FOB Kennesaw, GA USA - Prices Subject to Change

Tools-Salesman 2022

BECCA WATERBORNE HEAT SYSTEMS


BECCA EXCLUSIVE HEAT ON DEMAND

This rapid heat rise, energy efficient design meets Class I Division 1 requirements allowing it to be placed inside the paint mix room..

A User Reports: “The warm cleaning solution really gets the fluid passageways clean quickly, and my fluid tip, needle and seals stay clean. It’s GREAT!”

BECCA EXCLUSIVE STANDARD HEAT SYSTEM

Similar to a hot water tank, this system utilizes a heat band and is programmed with a supplied timer to reach the ideal cleaning temperature. This affordable heat option is ideal for units placed outside the paint mix room.

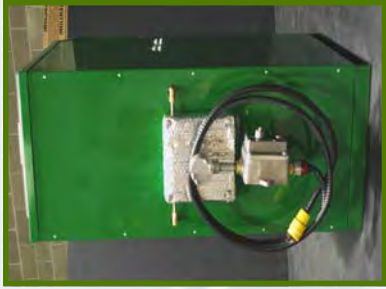

Shown on
E300A



Shown on
E100M

BECCA SOLVENTWASH™

Filtration Recycling Systems for Solvent Spray Gun Cleaners

BECCA has determined that when a shop converts to waterborne basecoats, the usage of solvent drops below the threshold that justifies the investment of a new distillation recycling system. The new BECCA SOLVENTWASH™ Series provides:

- Lower new system investment
- Reduced long term maintenance cost
- Less shop floor is required
- Increased painter up-time



Paint Spray Gun Cleaners

Waterborne & Solvent

For The Finishing Professional

Spray Gun Cleaner Benefits

- **Made in USA**
- **Color Coded Equipment -**
 - **Green - Waterborne**
 - **Red - Solvent**
- **Easy To Use**
- **Superior Cleaning Results**
- **Improved Production**
- **NESHAP Compliant**
- **24-Month Warranty**
- **BECCA Care™** - Local sales, installation, training and service



BECCA

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com



BECCA

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

Waterborne


E40M
Manual
Spray Gun Cleaner
Economy

- Table Top or Cart Mount
- Wall Mount (Optional)
- Stand w/ Legs (Optional)



E50M
Manual Flex
Spray Gun Cleaner

- Table Top or Cart Mount
- Wall Mount (Optional)
- Stand w/ Legs (Optional)




E100M
Manual Deluxe
Spray Gun Cleaner



E300A
Manual/Automatic
Spray Gun Cleaner



E700M
Manual
Deluxe Workstation



E800A
Manual/Automatic
Deluxe Workstation



Solvent

S40M
Manual
Spray Gun Cleaner
Economy

- Table Top or Cart Mount
- Wall Mount (Optional)
- Stand w/ Legs (Optional)



S50M
Manual Flex
Spray Gun Cleaner

- Table Top or Cart Mount
- Wall Mount (Optional)
- Stand w/ Legs (Optional)



S100M
Manual Deluxe
Spray Gun Cleaner



S300A
Manual/Automatic
Spray Gun Cleaner



S700M
Manual
Deluxe Workstation




S800A
Manual/Automatic
Deluxe Workstation



BECCA

The BECCA Family of Spray Gun Cleaners

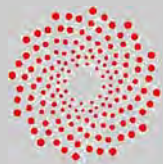

BECCA

Painter Productivity Level		Low/ Medium		Medium		High		High		Medium		High		High	
BECCA S-Series Model		Big Squirt System		S40M		S50M		S100M		S700M		S10A		S20A	
Cleaning Type	Features	Benefits		Manual Cleaning		Automatic Wash Basin		Detailed Cleaning		Free up Operator Time		Protect Air Passage Ways		Protect Air Passage Ways	
	POWER PISTOL™	Powerful Cleaning		Ultra Lite™ High Flow QD's		Corrosion Resistant		Stiff for better material removal		Corrosion Resistant & Meet Code		Reduce Solvent Splash		Protect Pump from moisture	
Standard Features and Options	Flow Brush	Brush Pad		Polyethylene Basin		Regulator Only		Optional		Optional		Optional		Optional	
	Stainless Steel Basin & Cover	Brush Pad		Polyethylene Basin		Regulator Only		Optional		Optional		Optional		Optional	
	Splash Pad	Brush Pad		Polyethylene Basin		Regulator Only		Optional		Optional		Optional		Optional	
	Water Trap/ Regulator	Protect Pump from moisture		Protect Pump from moisture		Filtration Recycling System		Fluid/Air Chop Cleans Lines & Pot		Capture VOC's		Free Standing System		Free up Floor Space	
	Filter Dryer / Regulator	Filtration Recycling System		Fluid/Air Chop Cleans Lines & Pot		Capture VOC's		Free Standing System		Free up Floor Space		Protect Air passageways		Code issue PA & CA	
	Solvent Wash Filtration System	Fluid/Air Chop Cleans Lines & Pot		Capture VOC's		Free Standing System		Free up Floor Space		Protect Air passageways		Code issue PA & CA		Cosmetic maintenance	
	TURBO Pressure Pot & Fluid Line	Capture VOC's		Free Standing System		Free up Floor Space		Protect Air passageways		Code issue PA & CA		Cosmetic maintenance		Cosmetic maintenance	
	Carbon Absorb Exhaust System	Free Standing System		Free up Floor Space		Protect Air passageways		Code issue PA & CA		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance	
	Mounting Stand w/ Legs	Free up Floor Space		Protect Air passageways		Code issue PA & CA		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance	
	Wall Mount Kit	Protect Air passageways		Code issue PA & CA		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance	
	POWERCLEAN for 2 nd Spray Gun	Code issue PA & CA		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance	
	Cover Door 700/800	Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance	
	Protect Film	Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance		Cosmetic maintenance	

S40M

Solvent Spray Gun Cleaner - Economy



The New BECCA S40M Economy Spray Gun Cleaner is designed to meet the challenges of getting waterborne spray guns clean.

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion

STANDARD UNIT FEATURES:

- STAINLESS STEEL BASIN - Compact Design, ideal for Tight Space Applications
- POWERPISTOL™ - Quick & Powerful Spray Gun Cleaning
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- SPLASH PAD - In Basin to Reduce Splash
- AIR CAP/FLUID TIP SCRUB BRUSH - Stiff Nylon Bristles for Powerful Cleaning
- FOOT PEDAL - Pump Control for Hands Free Operation
- RED POWDER COATED FINISH - Long Maintenance Life
- AIR FILTER/REGULATOR - Proper System Air Control
- NESHAP COMPLIANT - Meets National Requirements



Shown with Optional Mounting Stand with Legs Kit

OPTIONAL UPGRADES:

- MOUNTING STAND with LEGS - Creates a free-standing system
- WALL MOUNT KIT - Includes uni-strut and hardware for mounting to single-skin wall. Additional hardware may be required.



POWERPISTOL™ - Pulsating Fluid...
Powerful Cleaning for the Fluid Passageways



Air Cap Scrub BRUSH
Stiff Nylon Bristles for Quick Cleaning

Product Specifications:

Dimensions:

Overall:

24"H x 18"W x 12"L

610 mm x 457 mm x 305 mm

Working: (Stainless Basin)

12"D x 16.75"W x 14"H

305 mm x 426mm x 356 mm

Weight: 45 lbs (21 kg)


Shipping: UPS or Freight



S50M

Manual Flex Solvent Spray Gun Cleaner

Check out our
Brief
Training Videos at
www.beccainc.com

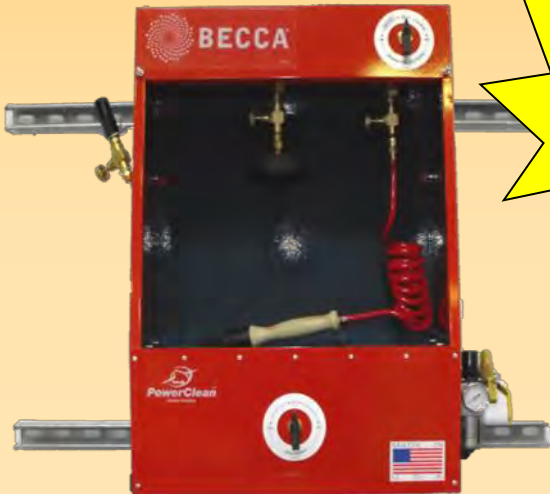

Shown with Optional Wall Mount Kit



Can be Table Top or Cart Mounted



Shown with Optional
Mounting Stand
with Legs Kit and
Optional Solvent Cans



• **POWERCLEAN** •
PROTECTS AIR PASSAGEWAYS

• **COMPACT DESIGN** •
TIGHT SPACE APPLICATIONS

• **PULSATING FLUID POWER CLEANING** •
FLUSHES AWAY CONTAMINATION

S50M

Manual Flex Solvent Spray Gun Cleaner

The New BECCA S50M Manual Flex Spray Gun Cleaner is designed to meet the challenges of getting solvent spray guns clean quickly....

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion

STANDARD UNIT FEATURES:

- STAINLESS STEEL BASIN - Compact Design, ideal for Tight Space Applications
- POWERPISTOL™ - Quick & Powerful Spray Gun Cleaning
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- SPLASH PAD - In Basin to Reduce Splash
- FLOW BRUSH - Stiff Nylon Bristles for Powerful Cleaning
- FOOT PEDAL - Pump Control for Hands Free Operation
- HIGH FLOW QD'S - High Flow Solvent Resistant
- RED POWDER COATED FINISH - Long Maintenance Life
- AIR FILTER/REGULATOR - Proper System Air Control

OPTIONAL UPGRADES:

- SOLVENTWASH™ CARTRIDGE FILTRATION w/ 75 Micron Filter
- MOUNTING STAND with LEGS – Creates a free-standing system
- WALL MOUNT KIT—Includes uni-strut and hardware for mounting to single-skin wall. Additional hardware may be required.



Shown with Optional Mounting Stand with Legs Kit and Solvent Cans

Product Specifications:

Dimensions:

Overall:

24"H x 18"W x 12"D

610 mm x 457 mm x 305 mm


Working: (Stainless Basin)

12"D x 16.75"W x 14"H


305 mm x 426mm x 356 mm

Weight: 45 lbs (21 kg)


Shipping: Freight

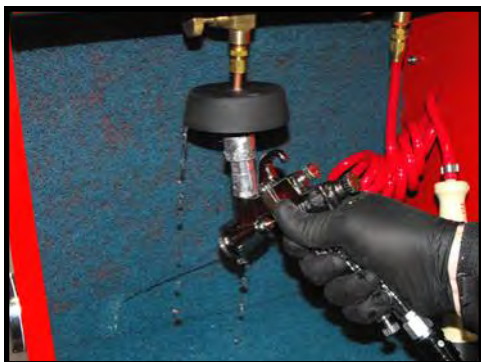

POWERPISTOL™ - Pulsating Fluid...
Powerful Cleaning for the Fluid Passageways

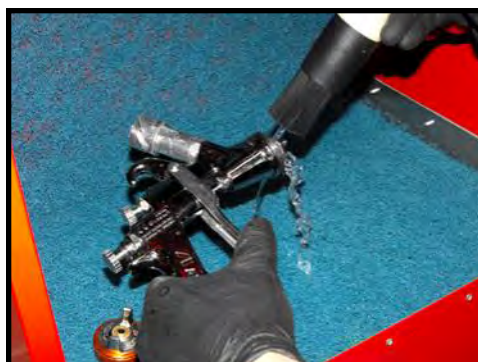

FLOW BRUSH Stiff Nylon Bristles for Powerful Cleaning

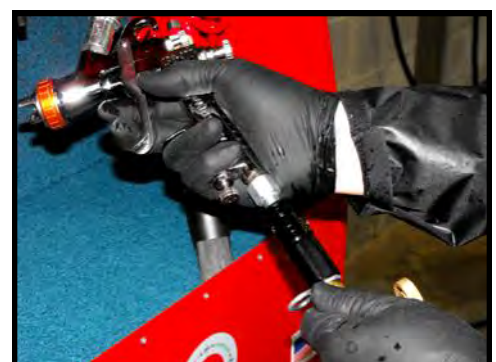

POWERCLEAN™ Supply's Compressed Air to the Spray Gun During the Cleaning Process, Protecting the Air Passageways



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

S100M

Manual Solvent Spray Gun Cleaner



Check out our
Brief
Training Videos at
www.beccainc.com



- **POWERCLEAN** •
PROTECTS AIR PASSAGEWAYS
- **OVERSIZED STAINLESS WORK BASIN** •
SPACIOUS WORK AREA
- **PULSATING FLUID POWER CLEANING** •
FLUSHES AWAY CONTAMINATION

S100M

Manual Solvent Spray Gun Cleaner

The New BECCA S100M Manual Spray Gun Cleaner is designed to meet the challenges of getting solvent spray guns clean quickly....

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion

STANDARD UNIT FEATURES:

- STAINLESS STEEL BASIN w/ COVER - Oversized work Area
- POWERPISTOL™ - Quick & Powerful Spray Gun Cleaning
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- SPLASH PAD - In Basin to Reduce Splash - Self Cleaning
- FLOW BRUSH/SPIGOT - Combined to Serve both Functions
- FOOT PEDAL - Hands-Free Fluid/Pump Control
- HIGH FLOW QD'S - High Flow Corrosion Resistant
- RED POWDER COATED FINISH - Long Maintenance Life
- INPUT AIR FILTER/REGULATOR - Proper System Air Control
- NESHAP COMPLIANT - Meets NESHAP Requirements



Product Specifications:

Dimensions:

Overall:

44"H x 26"W x 23"D

1118 mm x 660mm x 584 mm

Working: (Stainless Basin)

9"D x 21"W x 19"L

228 mm x 533mm x 483 mm

Weight: 110 lbs (50 kg)

Shipping: Via Freight

OPTIONAL UPGRADES:


- SOLVENTWASH™ CARTRIDGE FILTRATION w/ 75 Micron Filter
- FLUID RESERVOIR - 5 Gallon Steel Cans to hold Clean and Used Fluid
- SPLASH CONE - Enclosure to contain Spray Gun Flush Splash



POWERPISTOL™ - Pulsating Fluid...
Powerful Cleaning for the Fluid Passageways



OVERSIZED STAINLESS STEEL BASIN A Spacious Work Area for Easy Use

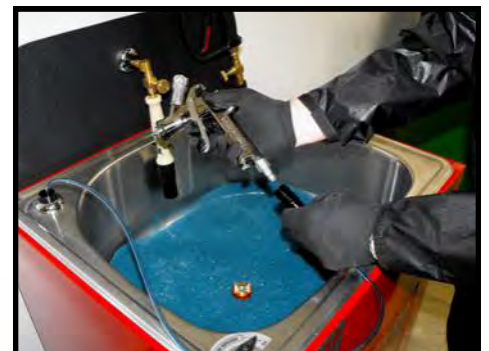

POWERCLEAN™ Supply's Compressed Air to the Spray Gun During the Cleaning Process, Protecting the Air Passageways



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

S10A

Automatic Solvent Spray Gun Cleaner



Check out our
Brief
Training Videos at
www.beccainc.com

Shown with Optional
5 Gallon Cans



BECCA®



- **POWERCLEAN®**
PROTECTS AIR PASSAGEWAYS
- **OVERSIZED STAINLESS WORK BASIN** •
SPACIOUS WORK AREA
- **PULSATING FLUID POWER CLEANING** •
FLUSHES AWAY CONTAMINATION

S10A

Automatic Solvent Spray Gun Cleaner

The New BECCA S10A Automatic Spray Gun Cleaner is designed to meet the challenges of getting solvent spray guns clean quickly....

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion

STANDARD UNIT FEATURES:

- STAINLESS STEEL BASIN w/ COVER - Oversized work Area
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- HIGH FLOW QD'S - High Flow Corrosion Resistant
- RED POWDER COATED FINISH - Long Maintenance Life
- INPUT AIR FILTER/REGULATOR - Proper System Air Control
- NESHAP COMPLIANT - Meets NESHAP Requirements



Shown with Optional 5 Gallon Steel Cans

OPTIONAL UPGRADES:

- SOLVENTWASH™ CARTRIDGE FILTRATION— Includes a two stage filtration system (75 & 25 Micron Filters)
- FLUID RESERVOIR - 5 Gallon Steel Cans to hold Clean and/or Used Fluid

Product Specifications:

Dimensions:

41.5"H x 18.5"W x 23.5"D
1054 mm x 470mm x 587 mm

Construction:

Stainless Steel Tank & Pan
Ultra Powder Coat Finish
Pulse Diaphragm Pump
Easy Use Controls

Weight: 75 lbs (34 kg)


Shipping: Via UPS or Freight



STAINLESS STEEL AUTOMATIC WASH BASIN... Maximize Operator Productivity



POWERCLEAN™ Supply's Compressed Air to the Spray Gun During the Cleaning Process, Protecting the Air Passageways

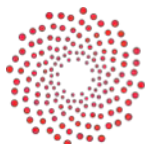

BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

S20A

Automatic/Manual Solvent Spray Gun Cleaner



Check out our
Brief
Training Videos at
www.beccainc.com

Shown with Optional
5 Gallon Cans



BECCA®



- **POWERCLEAN** •
PROTECTS AIR PASSAGEWAYS
- **OVERSIZED STAINLESS WORK BASIN** •
SPACIOUS WORK AREA
- **PULSATING FLUID POWER CLEANING** •
FLUSHES AWAY CONTAMINATION

S20A

Automatic/Manual Solvent Spray Gun Cleaner

The New BECCA S20A Automatic Spray Gun Cleaner is designed to meet the challenges of getting solvent spray guns clean quickly....

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion
- Manual & Automatic cleaning features

STANDARD UNIT FEATURES:

- STAINLESS STEEL BASIN w/ COVER - Compact Work Area
- AUTOMATIC HANDS-FREE CYCLE - Free up operator time
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- FLOW BRUSH - Improved Cleaning of dried material
- HI FLOW QD - High Flow Solvent Resistant
- RED POWDER COATED FINISH - Long Maintenance Life
- INPUT AIR FILTER/REGULATOR - Proper System Air Control
- NESHAP COMPLIANT - Meets NESHAP Requirements

OPTIONAL UPGRADES:

- SOLVENTWASH™ CARTRIDGE FILTRATION— Includes a two stage filtration system (75 & 25 Micron Filters)
- FLUID RESERVOIR - 5 Gallon Steel Cans to hold Clean and/or Used Fluid
- DUAL POWERCLEAN KIT - Second Spray Gun Connection in the Wash Basin



Shown with Optional 5 Gallon Steel Cans

Product Specifications:

Dimensions:

41.5"H x 18.5"W x 23.5"D
1054 mm x 470mm x 587 mm

Construction:

Stainless Steel Tank & Pan
Ultra Powder Coat Finish
Pulse Diaphragm Pump
Easy Use Controls

Weight: 75 lbs (34 kg)

Shipping: Via UPS or Freight



STAINLESS STEEL AUTOMATIC WASH BASIN... Maximize Operator Productivity



POWERCLEAN™ Supply's Compressed Air to the Spray Gun During the Cleaning Process, Protecting the Air Passageways



FLOW BRUSH Stiff Nylon Bristles for Powerful Cleaning



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

S300A

Automatic/Manual Solvent Spray Gun Cleaner



Check out our
Brief
Training Videos at
www.beccainc.com



- **POWERCLEAN** •
PROTECTS AIR PASSAGEWAYS
- **AUTOMATIC WASH BASIN** •
HANDS-FREE OPERATION
- **PULSATING FLUID POWER CLEANING** •
FLUSHES AWAY CONTAMINATION

S300A

Automatic/Manual Solvent Spray Gun Cleaner

The BECCA S300A Automatic Spray Gun Cleaner is designed to meet the challenges of getting solvent spray guns clean quickly....

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion

STANDARD UNIT FEATURES:

- STAINLESS STEEL BASIN w/ COVER - Compact Work Area
- AUTOMATIC HANDS-FREE CYCLE - Free up operator time
- POWERPISTOL™ - Quick & Powerful Spray Gun Cleaning
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- FLOW BRUSH - Improved Cleaning of dried material
- HI FLOW QD's - High Flow Solvent Resistant
- RED POWDER COATED FINISH - Long Maintenance Life
- INPUT AIR FILTER/REGULATOR - Proper System Air Control
- NESHAP COMPLIANT - Meets NESHAP Requirements

OPTIONAL UPGRADES:

- EXHAUST KIT - Venturi Stack & Controls to initiate exhaust. Controls only allow exhaust to run when the lid is open and shut off the exhaust during cleaning .
- SOLVENTWASH™ CARTRIDGE FILTRATION— Includes a two stage filtration system (75 & 25 Micron Filters)
- FLUID RESERVOIR - 5 Gallon Steel Can or 10 Gallon Stainless Steel Tank to hold Clean and/or Used Solvent Supply
- DUAL POWERCLEAN KIT - Second Spray Gun Connection in the Wash Basin



Product Specifications:

Dimensions:

Overall:

42.5"H x 15"W x 26"D

1080 mm x 381 mm x 660 mm

Working: (Stainless Basin)

14"D x 20"L x 12"W


356 mm x 508mm x 305 mm

Weight: 170 lbs (77 kg)

Shipping: Via Freight




POWERPISTOL™ - Pulsating Fluid... Powerful Cleaning for the Fluid Passageways

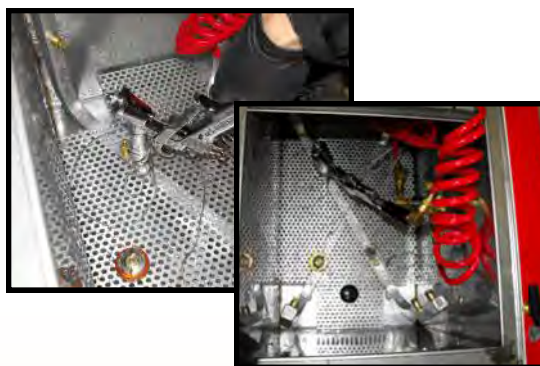

STAINLESS STEEL AUTOMATIC WASH BASIN Maximize Operator Productivity



POWERCLEAN™ Supply's Compressed Air to the Spray Gun During the Cleaning Process, Protecting the Air Passageways

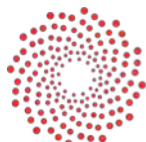

BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

S700M

Manual

Solvent Spray Gun Cleaning Workstation



Check out our
Brief
Training Videos at
www.beccainc.com

- POWERCLEAN •
PROTECTS AIR PASSAGEWAYS
- OVERSIZED STAINLESS WORK AREA •
LARGE ERGONOMIC WORK SPACE
- PULSATING FLUID POWER CLEANING •
FLUSHES AWAY CONTAMINATION



BECCA®



S700M

Manual

Solvent Spray Gun Cleaning Workstation

The BECCA S700M Manual Spray Gun Cleaner Workstation is designed to meet the challenges of getting solvent spray guns clean quickly....

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion



STANDARD UNIT FEATURES:

- STAINLESS STEEL GRILLED WORK AREA - Spacious and Painter Friendly
- POWERPISTOL™ - Quick & Powerful Spray Gun Cleaning
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- FLOW BRUSH - Improved Cleaning of dried material
- HIGH FLOW QD'S - High Flow Corrosion Resistant
- RED POWDER COATED FINISH - Long Maintenance Life
- INPUT AIR FILTER/REGULATOR - Proper System Air Control
- NESHAP COMPLIANT - Meets NESHAP Requirements

OPTIONAL UPGRADES:

- SOLVENTWASH™ CARTRIDGE FILTRATION - Less Maintenance & Improve Productivity with a Two Stage Filtration System (75 & 25 Micron Filters)
- FLUID RESERVOIR - 5 Gallon Steel Cans to hold Clean and Used Fluid
- COVER DOOR – Required in some Jurisdictions

Product Specifications:

Dimensions:

Overall:

57"H x 26"W x 26"D

1447 mm x 660 mm x 660 mm

Working: (Stainless Steel Working Area)

16"H x 25"W x 22"D


406 mm x 635 mm x 559 mm

Weight: 250 lbs (114 kg)


Shipping: Via Freight



POWERPISTOL™ - Pulsating Fluid... Powerful Cleaning for the Fluid Passageways

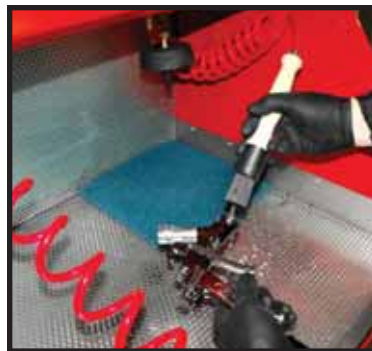

STAINLESS WORKSTATION
A Spacious Work Area for Easy Use

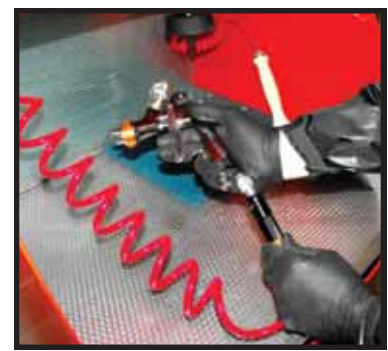

POWERCLEAN™ Supply's Compressed Air to the Spray Gun During the Cleaning Process, Protecting the Air Passageways



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

S800A

Deluxe Automatic/Manual Solvent Spray Gun Cleaning Workstation



Check out our
Brief
Training Videos at
www.beccainc.com



- POWERCLEAN •
PROTECTS AIR PASSAGEWAYS
- AUTOMATIC WASH BASIN •
HANDS-FREE OPERATION
- PULSATING FLUID POWER CLEANING •
FLUSHES AWAY CONTAMINATION

S800A

Deluxe Automatic/Manual Solvent Spray Gun Cleaning Workstation

The BECCA S800A Automatic Spray Gun Cleaner Workstation is designed to meet the challenges of getting solvent spray guns clean quickly....

- Cleans all of the fluid passageways
- Protects air passageways to prevent contamination and corrosion

STANDARD UNIT FEATURES:

- STAINLESS STEEL BASIN w/ COVER - Painter Friendly
- AUTOMATIC HANDS-FREE CYCLE - Free up operator time
- POWERPISTOL™ - Quick & Powerful Spray Gun Cleaning
- POWERCLEAN™ - Compressed Air Connection Protecting Air Passageways
- PULSATING FLUID - Powerful Cleaning Efficiency
- USED/CLEAN FLUID CONTROL - Superior Cleaning and 50% Solvent Savings
- FLOW BRUSH - Improved Cleaning of dried material
- HIGH FLOW QD'S - High Flow Corrosion Resistant
- RED POWDER COATED FINISH - Long Maintenance Life
- INPUT AIR FILTER/REGULATOR - Proper System Air Control
- NESHAP COMPLIANT - Meets NESHAP Requirements

OPTIONAL UPGRADES:

- SOLVENTWASH™ CARTRIDGE FILTRATION - Less Maintenance & Improve Productivity with a Two Stage Filtration System (75 & 25 Micron Filters)
- COVER DOOR — Required in some Jurisdictions
- DUAL POWERCLEAN KIT- Second Spray Gun Connection in the Wash Basin



Product Specifications:

Dimensions:

Overall:

57"H x 26"W x 26"D

1447 mm x 660 mm x 660 mm

Working: (Stainless Steel Basin)

14"H x 20"L x 12"W


356mm x 508 mm x 305 mm

Weight: 270 lbs (123 kg)

Shipping: Via Freight




POWERPISTOL™ - Pulsating Fluid... Powerful Cleaning for the Fluid Passageways

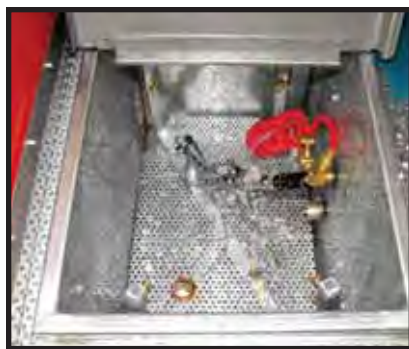

STAINLESS STEEL AUTOMATIC WASH BASIN... Maximize Operator Productivity



Manual

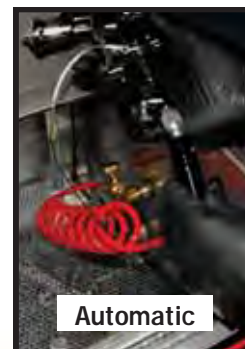

Automatic

POWERCLEAN™ Supply's Compressed Air to the Spray Gun During the Cleaning Process, Protecting the Air Passageways



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

SOLVENT

Options & Accessories For Solvent Spray Gun Cleaners



SOLVENTWASH™ Filtration Recycler System

The filtration system cleans the solvent of particulate down to 25 micron (some models 75 micron) when utilizing the 'Clean' solvent (Rinse) function.



Models S50M, S100M, S10A, S300A, S700M, & S800A

BECCA has developed a new solvent recycler using an add-on filtration system for its entire line of spray gun cleaners. The system can handle traditional solvents as well as EPA approved alternative solvents. The SOLVENTWASH filtration package can be ordered with your unit or retrofitted at a future date. This provides you the comfort to know that your BECCA Spray Gun Cleaner is always ready to serve you now and in the future.

5 Gallon Cans or 10 Gallon Tanks

Models
S50M, S100M,
S10A, S300A,
S700M & S800A

The **5 gal Cans** are standard solvent containers and come equipped with a pour spout.



Models
S700M & S800A

The **10 gal Tanks** are designed for the most demanding operations. Performance features:

- Stainless Steel Construction
- Sight Glass
- Direct Connection



Workstation Door Cover



Models S700M & S800A

The Workstation Door Cover is available for those applications that require total closure of the system when it is not in operation. This usually applies in California & Pennsylvania



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

SOLVENT

Options & Accessories For Solvent Spray Gun Cleaners



Turbo Pressure Pot & Fluid Line Cleaner System



Models S300A, S700M & S800A

The Pressure Pot Cleaner System was designed to handle the cleaning of the pressurized pot & fluid lines typically found in large or high production operations.

TURBO is a unique system that provides a Pre-Clean & Rinse capability through the fluid line. while turbulent compressed air is added providing the Turbo cleaning effect. The compressed air then can dry the lines.



Pressure Pot & Fluid Lines can be easily connected to the Turbo System utilizing your operations standard Fluid Quick Disconnects (not supplied)



S800A w/
TURBO



S300A w/
TURBO



Carbon Absorption Exhaust System

Models S10A, S300A, S700M, & S800A

Some installations cannot accommodate exhaust duct and/or allow VOC's into the environment. BECCA has developed a Carbon Absorption system for each of the BECCA NEXT Spray Gun Cleaners. The active carbon exhaust canister mounts on top of the exhaust outlet and is easily removed for replacement. Replacement is determined by odors emitting from the unit and/or a monitor placed in the area.



BECCA Protect™ Film

Models S50M, S100M, S10A, S300A, S700M & S800A

To keep your investment looking good through it 's life, we offer BECCA Protect™ Film.



Before
Removal

New
Application of
BECCA
Protect™



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

SOLVENTWASH™



Filtration

Recycling System

For Solvent Spray Gun Cleaners

*The
Professionals
Choice*

Filtration Recycling Benefits

- **BECCA Filtration Recycling** is ideal for Waterborne shops, where traditional Solvent Distillation Recycling can no longer be justified because only clearcoat and primer spray guns are being cleaned with solvent.
- **A Fraction of the Cost** of Distillation Recyclers
- **BECCA Filtration Recycling System** is compatible with conventional solvents and alternative clean-up solvents.
- **Easy Replacement of Cartridges**
- **Simple Use** - "Used" Solvent for Pre-Cleaning & Filtered Solvent for the Final Rinse
- **BECCA Care™** - Local sales, installation, training and service



S100M



S300A shown with Optional 5 Gal Container



S800A Shown w/ Optional TURBO Pressure Pot & Fluid Line Cleaner, 10 Gal Tank & Cover Door



S10A shown with Optional 5 Gal Container



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

BECCA SOLVENTWASH™ Filtration Recycling System

What is It?: This Proprietary Filtration Recycling process extends the life of the solvent for re-use. After a period of time re-used the solvent is purged and the filters replaced. This filtered solvent can last from 1-6 months, depending on the operators willingness to discard the paint remaining in the gun and perform a pre-rinse prior to using the spray gun cleaner. There are two configurations depending on the model of the Spray Gun Cleaner:

- 1) Dual Stage Filtration including a First Stage equipped with a 75 Micron Filtration Cartridge and a Second Stage equipped with a 25 Micron Filtration Cartridge.
- 2) Single Stage Filtration equipped with a 75 Micron Filtration Cartridge (2nd Stage Filtration can be requested at a later date)

Select When: You want to reduce the solvent waste generated and quit having it hauled away! Filtration Recycling can reduce this by up to 80%

How Does it Work?:

The underside of the spray gun cleaner will have one container of Solvent Cleaning Solution. Both lines are placed in the container allowing "Used" solvent to go directly for Pre-Cleaning and the other line goes through the SOLVENTWASH™ Filtration System to provide "Filtered" solvent for Rinsing.



Single Stage
Cartridge System



Dual Stage
Cartridge System

BECCA SINGLE STAGE CARTRIDGE FILTRATION

Single Stage Filter System including 75 Micron Filter Module to help provide a more productive system.

BECCA DUAL STAGE CARTRIDGE FILTRATION


Dual Stage Filter System including a 75 Micron and a 25 Micron Filter providing the best overall paint residue control.



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

Turbo™

Pressure Pot & Fluid Line Cleaner System

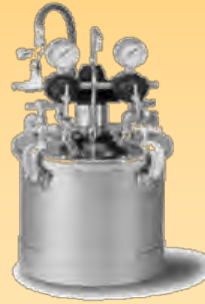

*The
Professionals
Choice*

Spray Gun Cleaner Option

BECCA Turbo™

Benefits

- **TURBO™** process for **Cleaner Pressure Pot & Fluid Lines**
- **Faster Cleaning** — Reduces Labor time
- **Save Solvent usage** with BECCA's Pre-Clean and Final Rinse system
- **Easy Connection to Pressure Pot**
Fluid Connections NOT supplied by BECCA
- **Two Methods of Cleaning:**
 - ◊ Detailed—Closed Loop
 - ◊ Quick—Connect & Shoot
- **2 Year Warranty—Longest in the Industry**
- **BECCA Care™** - Local sales, installation, training and service



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

**Models S100M, S10A, S20A,
S300A, S700M & S800A**

The Pressure Pot Cleaner System was designed to handle the cleaning of the pressurized pot & fluid lines typically found in large or high production operations.

TURBO is a unique system that provides a Pre-Clean & Rinse capability through the fluid line while turbulent compressed air is added providing the Turbo cleaning effect. The compressed air then can dry the lines.




BECCA®

It's all about improving
your productivity, finishing
quality, & saving money.

In today's environment, operations know the meaning of efficiency, reduced cycle time and variable cost reduction.

BECCA continues to redefine what a Solvent Recycler supplier should do for its customers:

**Help Customers Succeed
Deliver Quality Products
Bring the Latest in Technology
Provide the Best Service**

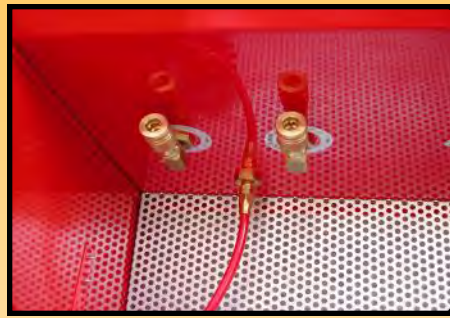

S800A

Pressure Pot & Fluid Lines can be easily connected to the Turbo System utilizing your operations standard Fluid Quick Disconnects (not supplied)




S300A



Two Methods of Cleaning:

- Quick Clean—Spraying out through the spray gun (above)
- Detail Clean—Using Closed Loop system (right & below)

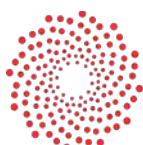

BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com



BECCA PRICING

Manual
Solvent

Phone: 770.419.5913 or 800.655.5649 Fax: 770.419.9438 or 800.655.5684
Website: www.beccainc.com Email orders to sales@beccainc.com

All prices are in USD. Prices Effective January 1, 2021. Prices Subject to Change without Notice. A 2.5% Fee will be Added to all Credit Card Orders over \$3,000.00. Lift Gates are an Extra Charge. All Parts Carry a 90 Day Warranty - Labor Not Included.

S40M	Manual Spray Gun Cleaner w/Flow Brush, Mounted Power Pistol, Foot Pedal	\$1,141.70	\$1,631
Part #	Options - S40M Only	Cost	List
830401K	Mounting Stand with Legs add	\$102.90	\$147
830402K	Wall Mount Kit add	\$102.90	\$147
830404K	Vent Kit for a S50M	\$127.40	\$182
831004AP5	"BECCA Protect Film" applied to unit add	\$102.90	\$147

S50M	Manual Spray Gun Cleaner w/POWERCLEAN, Flow Brush, Mounted PowerPistol, Foot Pedal, & High Flow QD	\$1,630.30	\$2,329
Part #	Options - S50M Only	Cost	List
830401K	Mounting Stand with Legs add	\$102.90	\$147
830402K	Wall Mount Kit add	\$102.90	\$147
830404K	Vent Kit for a S50M	\$127.40	\$182
831004AP5	"BECCA Protect Film" applied to unit add	\$102.90	\$147
TURBO100	Turbo Pressure Pot & Fluid Line Cleaner System (Add'l Parts Req'd for Connection) add	\$912.10	\$1,303

S100M	Manual Spray Gun Cleaner w/ POWERCLEAN, Flow Brush, Power Pistol, Foot Pedal, & High Flow QD	\$2,252.60	\$3,218
Part #	Options - S100M Only	Cost	List
831004AP10	"BECCA Protect Film" applied to unit add	\$151.20	\$216
Turbo100	Turbo Pressure Pot & Fluid Line Cleaner System (Add'l Parts Req'd for Connection) add	\$912.10	\$1,303

S700M	MANUAL DELUXE WORKSTATION Spray Gun Cleaner w/ Exhaust System, POWERCLEAN, Flow Brush, & Mounted Power Pistol, & Hi-Flow QD	\$4,253.20	\$6,076
Part #	Options - S700M Only	Cost	List
824450	Activated Carbon Filter (700 & 800 Series) add	\$906.50	\$1,563
830128K	Cover Door add	\$179.20	\$309
831004AP80	"BECCA Protect Film" applied to unit add	\$167.30	\$289
Turbo700	Turbo Pressure Pot & Fluid Line Cleaner System (Add'l Parts Req'd for Connection) add	\$1,005.90	\$1,735

Part #	Options Common to All Manual Units	Cost	List
823200B	5-Gallon Black Solvent Can add	\$25.90	\$37
830107K	10 Gal SS Tank (one tank, specify "Used" or "Clean" Solvent)add	\$737.10	\$1,053
825142K	Single Cartridge Filtration Recy - Continuous Process filtration includes: 1-75 Micron Filter for Fluid Recycling Assembly Req'd	\$648.20	\$926
825364K	Dual Cartridge Filtration Recy. - Continuous Process filtration includes: 2-75 & 1-25 Micron Filter for Fluid Recy Assembly Req'd	\$1,297.10	\$1,853



BECCA PRICING

**Automatic
Solvent**

Phone: 770.419.5913 or 800.655.5649 Fax: 770.419.9438 or 800.655.5684
Website: www.beccainc.com Email orders to sales@beccainc.com

All prices are in USD. Prices Effective January 1, 2021. Prices Subject to Change without Notice. A 2.5% Fee will be Added to all Credit Card Orders over \$3,000.00. Lift Gates are an Extra Charge. All Parts Carry a 90 Day Warranty - Labor Not Included.

S10A	AUTOMATIC Pressurized Spray Gun Cleaner w/POWERCLEAN, Manifold Pressure Boost, High Flow QD & Breather	\$2,252.60	\$3,218
Part #	Options - S10A Only	Cost	List
824451	Activated Carbon Filter (10, 20 & 300, Series) add	\$906.50	\$1,249
831004AP10	"BECCA Protect Film" applied to unit add	\$179.20	\$216
Turbo100	Turbo Pressure Pot & Fluid Line Cleaner System (Add'l Parts Req'd for Connection) add	\$912.10	\$1,303
S20A	AUTOMATIC Pressurized Spray Gun Cleaner w/POWERCLEAN, Manifold Pressure Boost, High Flow QD & Breather	\$2,545.90	\$3,637
Part #	Options - S20A Only	Cost	List
824451	Activated Carbon Filter (10, 20 & 300, Series)	\$874.30	\$1,249
831004AP10	"BECCA Protect Film" applied to unit add	\$151.20	\$216
Turbo100	Turbo Pressure Pot & Fluid Line Cleaner System (Add'l Parts Req'd for Connection) add	\$912.10	\$1,303
S300A	AUTOMATIC/MANUAL Pressurized Spray Gun Cleaner w/POWERCLEAN, Manifold Pressure, Boost, Flow Brush, PowerPistol, & Breather	\$3,164.70	\$4,521
Part #	Options - S300A Only	Cost	List
824451	Activated Carbon Filter (10, 20 & 300, Series)	\$874.30	\$1,249
825021K	4" Exhaust Kit add	\$151.20	\$216
831004AP30	"BECCA Protect Film" applied to unit add	\$151.20	\$216
Turbo300	Turbo Pressure Pot & Fluid Line Cleaner System (Additional Parts Req'd for Connection) add	\$912.10	\$1,303
S800A	AUTOMATIC/MANUAL DELUXE WORKSTATION Spray Gun Cleaner w/ Auto. Wash Basin, Exhaust System, POWERCLEAN, Manifold Pressure Boost, Flow Brush & Mounted Power Pistol, & Hi Flow QD	\$6,015.80	\$8,594
Part #	Options - S800A Only	Cost	List
824450	Activated Carbon Filter (700 & 800 Series)	\$1,094.10	\$1,563
830128K	Cover Door add	\$216.30	\$309
831004AP80	"BECCA Protect Film" applied to unit add	\$202.30	\$289
Turbo800	Turbo Pressure Pot & Fluid Line Cleaner System (Additional Parts Req'd for Connection) add	\$1,214.50	\$1,735
Part #	Options Common to All Automatic Units	Cost	List
823200B	5-Gallon Black Solvent Can add	\$25.90	\$37
824623K	Ext. Tube & Spray Nozzle (For S10A, S300A, S800A only) add	\$42.70	\$61
825125K	POWERCLEAN Kit for 2nd Spray Gun (For S10A, S300A, & S800A) add	\$109.20	\$156
830107K	10 Gal SS Tank (one tank, specify "Used" or "Clean" Solvent)add	\$737.10	\$1,053
825142K	Single Cartridge Filtration Recycling - Cont. Process filtration includes: 1-75 Micron Filter for Fluid Recycling Assembly Req'd	\$648.20	\$926
825364K	Dual Cartridge Filtration Recycling - Continuous Process filtration includes: 2-75 & 1-25 Micron Filter for Fluid Recy Assembly Req'd	\$1,297.10	\$1,853

BECCA[®] Combo Systems



Waste Solvent Recycling with
Paint Gun Cleaning Systems



*The
Professionals
Choice*

BECCA Combo Benefits

- Reduce your Solvent Purchases
- Cleans Paint Equipment thoroughly
- Reduces Hazardous Waste Generation
- Explosion-Proof Certified
- BECCA Care[™] - Local Sales, Installation, Training and Service
- Attractive, durable Solvent Resistant Powder Coat Finish
- Separate Clean & Dirty Solvent Container Stations
- Easy Valve Operated Dirty Solvent Transfer to Recycler
- 2 Year Warranty



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

Combo System Selection Guide



BECCA Combo System	Solvent Saver™ Recycler		Spray Gun Cleaning Equipment					
	High Capacity 6 Gallon (HC/9725)	Standard Capacity 3 Gallon (SC/9711)	Flex Manual (S50M)	Manual Spray Gun Cleaner (S100M)	Hands-Free Automatic (S10A)	Automatic w/ Flow Brush (S300A)	Manual Workstation (S700M)	Deluxe Workstation (S800A)
S800A w/HC	●							●
S700M w/HC	●						●	
S300A w/HC	●					●		
S10A w/ HC	●				●			
S100M w/ HC	●			●				
S50M w/ HC	●		●					
S800A w/SC		●						●
S700M w/SC		●					●	
S300A w/SC		●				●		
S10A w/ SC		●			●			
S100M w/ SC		●		●				
S50M w/ SC		●	●					

OPTIONAL UPGRADES:

- **DIRECT CONNECT**—Make your Combo System truly HANDS FREE with our Optional Direct Connect Feature. BECCA has designed this package to allow the Spray Gun Cleaner to pull Clean Solvent directly from the Clean Solvent Reservoir in the Recycler.
- **10 GALLON STAINLESS STEEL TANKS**—BECCA has available 10 Gallon Stainless Steel Tanks with Sight Glass. This will increase the fluid capacity of the Combo System and help prevent solvent over-flow.



2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
 Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com



All prices are in USD. Prices Effective January 1, 2021. Prices Subject to Change without Notice. A 2.5% Fee will be Added to all Credit Card Orders over \$3,000.00. Lift Gates are an Extra Charge. All Parts Carry a 90 Day Warranty - Labor Not Included.

Combination Spray Gun Cleaner w/ Distillation Recycler

Part #	Description	Cost	List
S50M/SC	S50M Manual Spray Gun Cleaner w/SC-3 Gal Solvent Saver Recycler	\$6,920.20	\$9,886
S50M/HC	S50M Manual Spray Gun Cleaner w/HC-6 Gal Solvent Saver Recycler	\$7,957.60	\$11,368

Note: For Specific Spray Gun Cleaner & Recycler Options, see "Spray Gun Cleaner"&"Solvent Recycler" Price Sheets

Part #	Description	Cost	List
S100M/SC	S100M MANUAL Spray Gun Cleaner w/SC-3 Gal Solvent Saver Recycler	\$7,543.90	\$10,777
S100M/HC	S100M MANUAL Spray Gun Cleaner w/HC-3 Gal Solvent Saver Recycler	\$8,581.30	\$12,259

Note: For Specific Spray Gun Cleaner & Recycler Options, see "Spray Gun Cleaner"&"Solvent Recycler" Price Sheets

Part #	Description	Cost	List
S700M/SC	S700M Manual Deluxe Workstation w/SC-3 Gal Solvent Saver Recycler	\$9,543.10	\$13,633
S700M/HC	S700M Manual Deluxe Workstation w/HC-6 Gal Solvent Saver Recycler	\$10,580.50	\$15,115

Note: For Specific Spray Gun Cleaner & Recycler Options, see "Spray Gun Cleaner"&"Solvent Recycler" Price Sheets

Part #	Description	Cost	List
S10A/SC	S10A AUTOMATIC Pressurized Spray Gun Cleaner w/SC - 3 Gal Solvent Saver Recycler	\$7,543.90	\$10,777
S10A/HC	S10A AUTOMATIC Pressurized Spray Gun Cleaner w/HC - 6 Gal Solvent Saver Recycler	\$8,581.30	\$12,259

Note: For Specific Spray Gun Cleaner & Recycler Options, see "Spray Gun Cleaner"&"Solvent Recycler" Price Sheets

Part #	Description	Cost	List
S20A/SC	S20A AUTOMATIC Pressurized Spray Gun Cleaner w/SC - 3 Gal Solvent Saver Recycler	\$7,835.80	\$11,194
S20A/HC	S20A AUTOMATIC Pressurized Spray Gun Cleaner w/HC - 6 Gal Solvent Saver Recycler	\$8,873.20	\$12,676

Note: For Specific Spray Gun Cleaner & Recycler Options, see "Spray Gun Cleaner"&"Solvent Recycler" Price Sheets

Part #	Description	Cost	List
S300A/SC	S300A AUTOMATIC/MANUAL Pressurized Spray Gun Cleaner w/ SC - 3 Gal Solvent Saver Recycler	\$8,877.40	\$12,682
S300A/HC	S300A AUTOMATIC/MANUAL Pressurized Spray Gun Cleaner w/ HC - 6 Gal Solvent Saver Recycler	\$9,967.30	\$14,239

Note: For Specific Spray Gun Cleaner & Recycler Options, see "Spray Gun Cleaner"&"Solvent Recycler" Price Sheets

Part #	Description	Cost	List
S800A/SC	S800A Automatic/Manual Deluxe Workstation w/ SC - 3 Gal Solvent Saver Recycler	\$11,306.40	\$16,152
S800A/HC	S800A Automatic/Manual Deluxe Workstation w/ HC - 6 Gal Solvent Saver Recycler	\$12,344.50	\$17,635

Note: Specific Spray Gun Cleaner & Recycler Options, see "Spray Gun Cleaner"&"Solvent Recycler" Price Sheets

Part #	Options - Common between COMBO's	Cost	List
823200B	5 Gallon Solvent Can add	\$26	\$37
830107K	10 Gallon SS Tank (If Purchasing One Tank, Specify "Used" or "Clean" Solvent) add	\$737.10	\$1,053
825065K	"Direct Connect" (Recommend 10 Gal SS Tank when selected) add	\$208	\$297
825060K	Booster Pump Kit - Direct Connect - Long distance connections to Spray Cleaner add	\$725.90	\$1,037
825125K	Power Clean Kit for 2nd Spray Gun (S10A, S300A, S800A Only)	\$109	\$156
831004AP COMBO	"BECCA Protect Film" applied to unit add	\$352.10	\$503



Spray Gun System
Complete Advanced Gun Polishing System
☉ Waterborne and ☉ Solvent

New or Used...RE-NU™ your Spray Gun to Like New Performance!

RE-NU™ is a process designed to restore the performance of any spray gun. The polish will remove/reduce micro inclusions from the surface. This will provide less friction and turbulence in the flow of fluid and air to maximize performance. The system works with any material but works exceptional with metal surfaces.

- No Fish Eye
- Simple 4 Step Process
- Use Recommended Every 3 - 6 months



Part # 825175

Kit Includes: Polishing Cone and Paste, Gloves, Microfiber Cloth, Spray Bottle of EZ Release, Nylon Brush, & Cleaning Pad



From This



To This

Check out our brief Training Videos at www.beccainc.com



Made In U.S.A.

RE-NU Spray Gun System

Complete Advanced Gun Polishing System

☉ Waterborne and ☉ Solvent

Four Steps

RE-NU™ is a process designed to restore the performance of any spray gun. The polish will remove/reduce micro inclusions from the surface. This will provide less friction and turbulence in the flow of fluid and air to maximize performance. The system works with any material but works exceptional with metal surfaces. The system is a 4 Step process. We will review each step to assure success.

Step One: Tear Down

Tear down the spray gun completely. This includes air and fluid passageways.

Step Two: Detail Cleaning of the Spray Gun

The spray gun should be completely dis-assembled (particularly the first time) to assure removal of all residues.

We recommend the use of:

Waterborne Coatings: Acetone mixed w/ Aircraft Stripper 10:1 Ratio



Other Coatings: Solvent of choice mixed w/ Aircraft Stripper 10:1 Ratio

Clean all parts including Air passageways.





Step Three: RE-NU Polish

Apply RE-NU Polish to all surfaces of the spray gun and its parts. Make sure to focus on the needle tip area (Only do a section at a time. Do not let polish dry completely). We have supplied a special application brush to polish the inside passageway of the fluid tip. Polish...Wipe/rinse the brush...Repeat this process 2-3 times. Remove the polish residues with the supplied micro-Fiber Cloth and Buffing Pad.

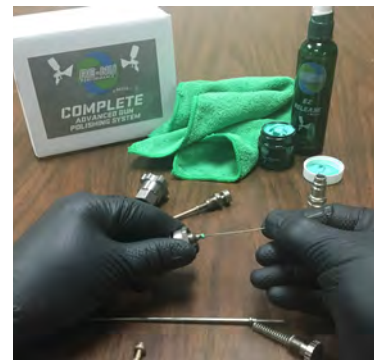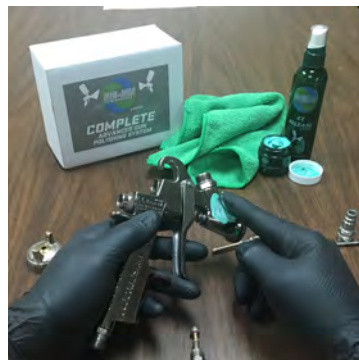

Step Four: EZ Release Spray (for Waterborne & Solvent)

Apply EZ-Release w/ Micro-Film coating to all surfaces including air and fluid passageways. The micro-film coating is PH neutral and will minimize corrosion and will prevent paint from adhering to the surface. Re-apply after cleaning the spray gun during normal production. Note: Those w/ a BECCA Waterborne Spray Gun Cleaners do not need to reapply since the Micro-Film technology is in WaterWave™

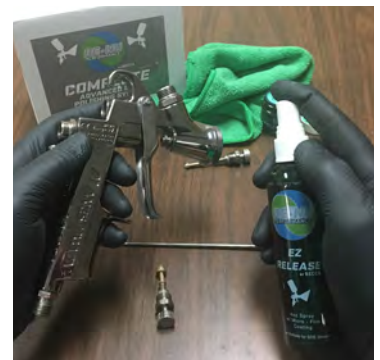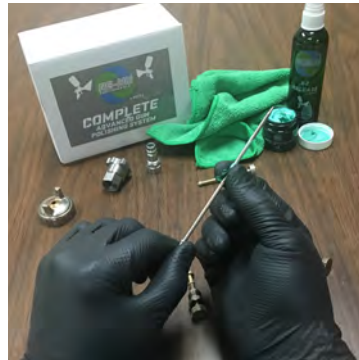



ULTRA LITE™

Check Out Our Brief
Training Videos at
www.beccainc.com

Quick Disconnects

(for Compressed Air)



By BECCA

HIGH FLOW QD's Heavy Duty (BLACK)



Package of 6
Part# 825550 - 6

• FEATURES INCLUDE:

- Global High Flow Design
- 1/4" NPT Thread
- Corrosion Resistant Anodized Aircraft Aluminum Body (BLACK)
- Solvent Resistant Seal
- Stainless Steel Springs
- Satisfies both Female or Male Connections (w/Nipple)
- 35% Lighter than Standard Couplers

• PERFORMANCE CHARACTERISTICS

- 25% More Air Flow for Improved Performance
- Push Connect easy connection
- Max Pressure 300 PSI

HIGH FLOW STEMS

COMMON FEATURES

- Global High Flow Design
- 1/4" NPT Thread
- Corrosion Resistant
- Female or Male

COMMON PERFORMANCE CHARACTERISTICS

- 25% More Air Flow for Improved Performance
- Max Pressure 300 PSI

Heavy Duty (Silver)

Nitride Hardened Plated Steel



Package of 6
Part# 825652 - 6



Package of 6
Part# 825651 - 6

Jan 2019



BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com



ULTRA LITE™



Quick Disconnects

By  **BECCA®**

(for Compressed Air)

STANDARD FLOW QD's

Heavy Duty (Red)



Package of 6
Part# 825785 - 6

• FEATURES INCLUDE:

- Standard Flow Industrial Type D Industrial Design - Short Nipple
- 1/4" NPT Thread
- Corrosion Resistant Anodized Aircraft Aluminum Body (RED)
- Solvent Resistant Seal
- Stainless Steel Springs
- Satisfies both Female or Male Connections (w/Nipple)
- 35% Lighter than Standard Couplers

• PERFORMANCE CHARACTERISTICS

- Push Connect easy connection
- Max Pressure 300 PSI

STANDARD FLOW STEM's

Light Duty (Red)

Red Anodized Aircraft Aluminum - 35% Lighter



Package of 6
Part#825788 - 6

Package of 6
Part# 825787- 6

COMMON FEATURES

- Standard Flow Industrial Type D
- 1/4" NPT Thread
- Corrosion Resistant
- Female or Male

COMMON PERFORMANCE CHARACTERISTICS

- Max Pressure 300 PSI

Heavy Duty (Silver)

Nitride Hardened Plated Steel



Package of 6
Part# 825918 - 6

Package of 6
Part# 825917 - 6



BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet:

BECCA Consumables - Salesman's Quick Reference



WATERWAVE



Part Number	Product Description	List Price	
825190 - 6	6 Bottles of WATERWAVE Concentrate	\$182.00	*
825190 - 12	12 Bottles of WATERWAVE Concentrate	\$322.00	*

FLOCCER



Part Number	Product Description	List Price	
825189	84 oz Bulk Container of FLOCCER	\$77.00	*
825185 - 25	25 FLOCCER Packets Until Sold Out	\$77.00	*
825185 - 100	100 FLOCCER Packets Until Sold Out	\$276.00	*

H2O DRY



Part Number	Product Description	List Price	
836025	25 lb Bulk Container of H2O DRY	\$262.00	*
836840 New Size	84 Oz Bulk Container of H2O DRY	\$99.00	*
836002 - 6	6 Bottles of H2O DRY	\$64.00	*
836001K	Replenish Kit - 3 Liners, 6 Bottles, 3 Stir Sticks	\$91.00	*
CD - 50	Full Kit - 1 Container, 3 Liners, 6 Bottles, 3 Stir Stick	\$103.00	*

RE-NU



Advanced
Gun Polishing
System

Part Number	Product Description	List Price	
825175	RE-NU Advanced Gun Polishing System	\$130.00	*
NEW Product	Includes: a Microfiber Cloth, Gloves, Spray Bottle of EZ Release, a Nylon Brush, a Polishing Cone and Paste.		

Quick Disconnects



Part Number	Product Description	List Price	
825550 - 6	6 Pack High Flow (Black) QD's	\$172.00	*
825785 - 6	6 Pack Std Flow (Red) QD's	\$172.00	*

High Flow Stems/Nipples



Part Number	Product Description	List Price	
825652 - 6	6 Male Heavy Duty HF (Silver) Stems	\$25.00	*
825651 - 6	6 Female Heavy Duty HF (Silver) Stems	\$25.00	*

Standard Flow Stems/Nipples



Part Number	Product Description	List Price	
825918 - 6	6 Male Heavy Duty SF (Silver) Stems	\$25.00	*
825917 - 6	6 Female Heavy Duty SF (Silver) Stems	\$25.00	*



Part Number	Product Description	List Price	
825788 - 6	6 Male Light Duty SF (Red) Stems	\$15.00	*
825787 - 6	6 Female Light Duty SF (Red) Stems	\$15.00	*



Why Leasing?

Leasing is the easiest way to show a customer a very fast return on investment of the BECCA equipment. In fact, in most cases the lease payment is less than his current method of handling solvent and waste currently.

By leasing you can show a customer what they are currently spending and what a monthly payment would be with their new equipment. BECCA has found a lease company that is very aggressive and has many benefits compared to other lease company's from the past.

Why Leasing?

- ✓ Minimal Investment up front for customer.
- ✓ Conserve existing credit line.
- ✓ Lease payment usually lower than current payments for waste removal, solvent purchase and if they are renting product.
- ✓ Great Tax benefits (Customer should consult tax adviser)

Why BECCA Leasing Partners?


- ✓ All ready know and understand BECCA Products
- ✓ Easy Application
- ✓ No pre-payment penalties
- ✓ No fees of any kind.
- ✓ All leases \$ 1.00 purchase option.
- ✓ Easy Process:
 - Customer signs your quote
 - You fax to Leasing Partner
 - Leasing Partner sends docs to customer
 - Customer signs and sends first and last payment with docs
 - You receive a PO & Send PO to BECCA Inc
 - BECCA ships equipment.
 - Customer signs off on equipment
 - Leasing company sends check

BECCA Inc Leasing Partners:

- Lease Corporation of America 800-800-8098
- Navitas Lease Finance Corp 866-956-2848
- Trinity Finance 800-841-4433

Special BECCA Rates:

ASK FOR CURRENT RATES

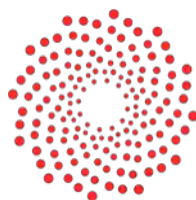

BECCA®

Solvent Paint Process Waste Minimization SOP

How to minimize Hazardous waste to Near Zero.....Solvent Basecoat & Solvent Clear/Primers
Using BECCA RE-NU™, Spray Gun Cleaner System, & Recyclers (Filtration & Distillation),

Solvent Paint Process Waste Minimization begins by Detail Cleaning & Polishing of Spray Gun to like new condition

**RE-NU
Spray Gun
Cleaning &
Polishing
System**




Solvent Paint Process Waste Minimization is maintained by Using the proper Cleaning System



Paint Spray Gun Critical Points


- Fluid Tip & Needle
- Fluid Needle Packing
- Fan Control Knob
- Micro Air Adjustment
- Trigger Air Piston

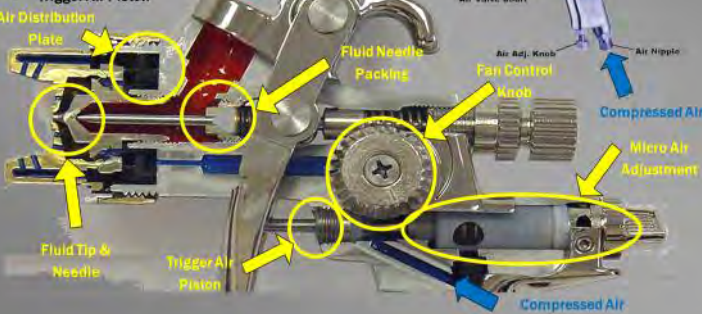

Recycle Solvent Waste by Using Either Filtration or Distillation

Filtration

- Available Option on all BECCA Spray Gun Cleaners
- Filtration is ideal in Waterborne Systems where there is less solvent Waste.
- Cost 80% less than Distillation
- Cartridge Filters can be treated like Exhaust filters for disposal.
- Solvent is limited w/ Waterborne (Activator)

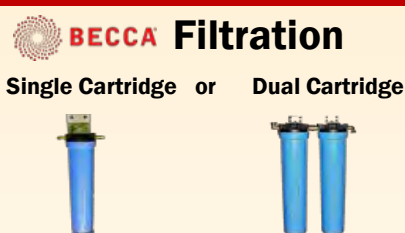

Filtration Recycling Process

1. The Optional Filtration System is built into the Spray Gun Cleaner
2. Since Spray Gun Cleaners have a Clean & Used Solvent Selection, the Filtration is used when the Clean Solvent is selected. Depending on the type of unit the system filters in a single stage (75 micron) or Dual stage (75 & 25 Micron)
3. When using Filtration the cleaning process is mainly Clear Coat and/or Primer materials that have activator. After a period of 2-3 months the Activator laden solvent and the Filters should be removed. Both are the only Hazardous Waste generated.

Recycle Solvent Waste by Using Either Filtration or Distillation

Distillation

- Available Option on all BECCA Spray Gun Cleaners
- Distillation is ideal in Solvent Systems where there is more solvent Waste.
- Can Recycle Solvent indefinitely—May need to add Acetone (replace evaporation)
- Still Bottom waste should be treated as Hazardous




Distillation Recycling Process

1. The Optional Distillation System can be directly connected to the Spray Gun Cleaner for a closed loop system.
2. These units handle waste in a batch process and typically take 4-4.5 hours.
3. Follow Step-by-Step Operational Poster for maximum success!
4. Recycler Bags make it easier to remove Still Bottom waste puck.



**** Dispose of All Wastes in Accordance w/ all Federal, State, & Local Requirements. Must have Waste Tested and documentation kept on file. Testing Labs can be found by using an online search engine..... Use "Hazardous Material Testing Lab " and your city.**


©Copyright Sept 2021

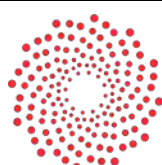

BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

Check out our
Brief
Training Videos at
www.beccainc.com

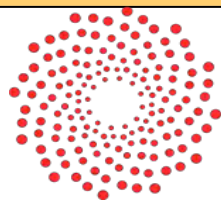

BECCA®

Solvent Manual Spray Gun Cleaning SOP

Clean Gun As Soon As Possible.

Tan pronto como sea posible en la pistola limpia.

Step 1.

**Detach Disposable Cup & Pour Waste
Paint from Gun into Cup**


*Separar Copa desechable y verter residuos
de pintura pistola en la cubeta*



Step 2.

**Pre - Rinse Gun Into Disposable Cup.....
Trigger Gun**

*Pistola en Taza desechable Pre Rin-
se.....gatillo de la pistola.*

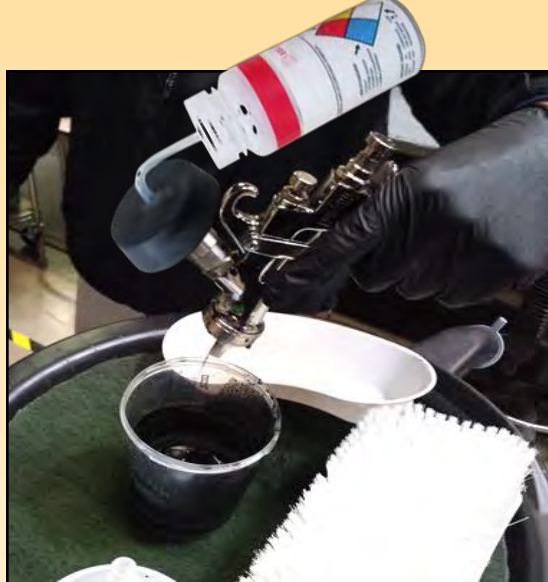

Step 3.

**Remove Air Cap
Eliminar Air Cap**



Step 4.

POWERCLEAN™

Quick-connect compressed air.

Conexión rápida de aire comprimido



Step 5.

Flow Brush

- Clean air cap
Limpiar Air Cap
- Clean fluid tip
*Limpiar el líquido
del Consejo*



Step 6.

POWERPISTOL™

Trigger gun at same time

*Cañón de desencadenador al mismo
tiempo*




Step 7.

POWERCLEAN™

**Disconnect compressed air.
Desconectar de aire comprimido**



©Copyright Jan 2022

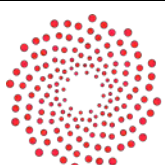

BECCA®

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com