


Please read before using this product



WATER WAVE™

Tips For Success!!!

Water Wave™ is a concentrate Cleaning Solution designed specifically for Waterborne materials. Mixed with water and used in a heated state, Water Wave™ will clean the most difficult colors like Red's & White's quickly. The Micro-Film™ (No effect to paint materials) coating left from its use will add to the speed of cleaning the Spray Gun.

- 1) Use Water Wave™ mixed with water (distilled or tap). One bottle makes 5 Gallons of cleaning solution.
- 2) When heated  the Water Wave™ cleaning solution becomes highly active and speeds up the cleaning process.
- 3) Very Important! - Complete a detail cleaning of the Spray Gun prior to using Water Wave™ to assure the Micro-Film™ coating will reach all surfaces. Where ever paint is adhered on the Spray Gun the Micro-Film™ will not coat the surface.
- 4) Equally as Important! - Do not perform a final chase with any product other than Water Wave™. Chasing will remove the Micro-Film™ coating and the enhanced cleaning performance. Instead, Use an OSHA Approved Blow Gun to remove the remaining water droplets!



BECCA

2010 Cobb International Blvd NW, Kennesaw, GA 30152
TEL: 800-655-5649 FAX: 800-655-5684

Sept 2019



WATER WAVE™

Check Out Our Brief Training Videos at www.beccainc.com

By BECCA



Waterborne Cleaning Solution Concentrate w/ Micro-Film Technology

Meets SCAQMD VOC Requirements when mixed



Works great with Automotive Refinish Waterborne Basecoat Paints Including:

- Axalta®
- PPG®
- Sherwin Williams®
- BASF®
- AKZO Nobel®
- Valspar®
- & Others

- Highly Active w/ Heated Cleaning Systems
- Leaves Micro-Film - making next cleaning easier
- PH Neutralizer
- Non-Hazardous
- Biodegradable
- Phosphate Free
- Flexible - Can be Used w/ any Brand of Spray Gun Cleaner
- (1) 8oz Bottle per 5 Gal of Water




Contains: Anti-Bacterial, Anti-Foaming, Surfactant, & Orange Scent

Available in: **6 Pack - 825190-6**
12 Pack - 825190-12

*Visit www.beccainc.com to see the Water Wave™ Formulation for Your Paint Brand

COST EFFECTIVE

FASTER CLEANING

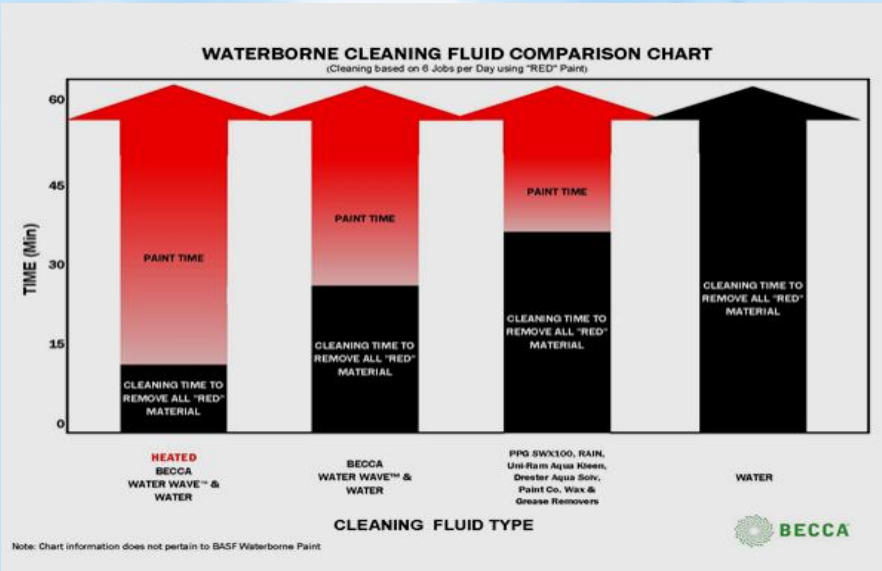

Brand	Cost/5 Gal
BECCA Water Wave™	~\$21 - 23
PPG SWX 100	~\$36 - \$38
Uni-Ram Aqua Kleen	~\$51
Cumberland Rain or B-Tec Aqua Max	~\$57
Drester Aqua Solv	~\$79
Wax & Grease Removers	~\$30 - \$285
BASF 915, 700-1 or 700-10	~\$190 - \$285

Dispose of Waste in Accordance with all Federal, State & Local Requirements



2010 Cobb International Blvd NW, Kennesaw, GA 30152
TEL: 800-655-5649 FAX: 800-655-5684

Jan 2019