

ENVIRO

Options & Accessories For Waterborne Spray Gun Cleaners




BECCA WATERBORNE HEAT SYSTEMS

BECCA EXCLUSIVE HEAT ON DEMAND

This rapid heat rise, energy efficient design meets Class I Division 1 requirements allowing it to be placed inside the paint mix room.

A User Reports: "The warm cleaning solution really gets the fluid passageways clean quickly, and my fluid tip, needle and seals stay clean. It's GREAT!"

Shown on
E300A

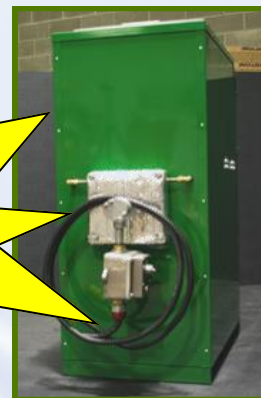

Check out our
Brief
Training Videos at
www.beccainc.com

BECCA EXCLUSIVE STANDARD HEAT SYSTEM

Similar to a hot water tank, this system utilizes a heat band and is programmed with a supplied timer to reach the ideal cleaning temperature. This affordable heat option is ideal for units placed outside the paint mix room.



Shown on
E100M

BECCA COVER DOOR — For Workstation Systems

The E700M & E800A Spray Gun Cleaning Workstation's have available a Cover Door to meet local jurisdiction requirements. Although not required per NESHAP. Some jurisdiction interpretations lead to its addition.



BECCA PROTECT FILM

This Poly maintenance material is designed to keep your investment looking good through it's life. It is easily applied like a decal and can be peeled off when ready to apply a new coat. It can be provided on a unit at the factory or purchased by the roll to be applied in the field. .



BECCA

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com

ENVIRO

Options & Accessories For Waterborne Spray Gun Cleaners



BECCA FILTRATION SYSTEMS - FREE UP OPERATOR TIME

BECCA's Filtration Systems are designed to remove paint residues from the system continually. This in combination with the proprietary BECCA Clarification System provides a cleaner process and allows for less periodic maintenance of the system.

BECCA SINGLE STAGE CARTRIDGE FILTRATION

Single Sage Filter System includes a 75 Micron Filter Module to help provide a more productive system.



Single Cartridge System

BECCA DUAL STAGE CARTRIDGE FILTRATION

Dual Stage Filter System includes a 75 Micron and a 25 Micron Filter providing the best overall paint residue control.

Note: We see at 40 Micron. So you have a sense on how efficient Filtering to 25 Micron can be.



Dual Cartridge System



Dual Cartridge System
Shown on E800A


BECCA DUAL POWERCLEAN KIT— For 2ND Spray Gun in The Wash Basin

This system is designed to provide POWERCLEAN compressed air connections to two spray guns in the Wash Basin at the same time.



ENVIRO E300A DUAL POWERCLEAN KIT

-Second Spray Gun Connection in the Wash Basin

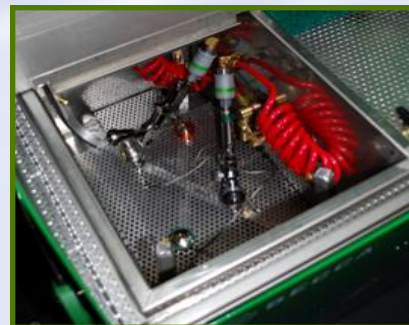

ENVIRO E800A DUAL POWERCLEAN KIT

-Second Spray Gun Connection in the Wash Basin



BECCA

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152
Phone 800.655.5649 Fax 800.655.5684 Internet: www.beccainc.com